


ROBAM

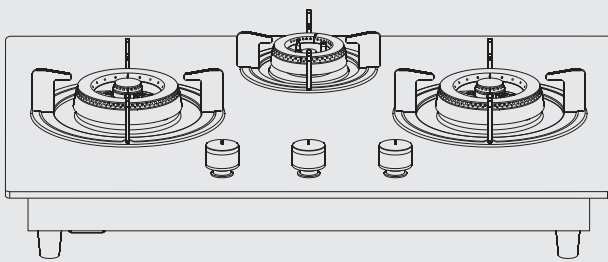

Operation Manual

JZ(Y/T/R)-B398

Gas Hob




Contents

Attention	1
Product Overview	4
Product Structure	4
Product Features	4
Product Parameter	5
Installation Instruction	5
Use Instruction	6
Clean and Maintenance	7
General Troubleshooting	8
Attachment	8

Attention


In order to avoid harm to users and cause property damage, special to make the following distinguish and signs ,all are important issues about security, please strictly comply with, and use correctly on the basis of fully understanding.






According to the extent of damage to distinguish

 Danger	If ignore the sign and error operating, may cause danger, injury or fire.
 Warning	If ignore the sign and error operating, may cause danger, injury or fire.
 Attention	If ignore the sign and error operating, may cause danger and goods damage.


sign of attention and forbid


 Forbid	 No touching	 No disassembly	 Strictly Enforce	 Burn care
-------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------


 Warning Please in strict accordance with the provisions of this specification, any property damage and injury caused by wrong use, our company is not responsible for.


 Danger	
 Strictly Enforce	The gas connector must use special rubber tube and replace it at least once every year. It' s better to use the rubber tube with 1-1.5m. Don' t bend or squash rubber tube. Forbid to use defective or aged rubber tube. Please pay attention to the connection of rubber tube which must be fixed and locked by anchor ear to avoid from fire or poisoning.
 Strictly Enforce	It must use special rubber tube to connect gas hob with gas source. (For example, good quality of composited premier or butyronitrile rubber tube). Forbid to use rubber tube made by normal rubber tube will react with ozone, liquid oil, etc. It will make normal rubber tube aged or crack to leakage and cause fire.
 Strictly Enforce	Screw off ϕ 9.5 soft pipe's connector firstly, if users want to use G1/2 inch connector, then put rubber gasket on connector place, screw nut, testing leakage. Don't use gas hob if there is any gas leakage.
 Strictly Enforce	Don't rotate fixed screw nut connecting with inlet gas pipe arbitrary. It must be tested leakage after rotating the direction or inlet gas pipe. (Method :paint tenuous and neuter cleaning solution on the connecting part, then open the valve. If there is air bladder, please close the valve and tighten screw nut; Test it again until there is nothing leakage).


Danger


 If use anti-deciduous metal soft tube, the operator must install this product strictly according to manual instructions on the package of anti-deciduous metal soft tube.(It Strictly Enforce must be installed by appointed professional operator and test leakage. (The testing method refer to above).


 If connected by special rubber tube, one side of rubber tube should connect gas valve, and another side should connect intake. (Notice: please take down the protective caps of the joint before connecting).The special rubber tube should cover the red mark in the joint and lock it with anchor ear. After testing leakage, the gas hob can be used.


 If find leakage of gas hob, turn off the gas immediately, open the window and exchange the air. Prohibit exhausting air with fan, range hood or other appliances. Don' t operate appliances knob avoiding from fume and fire, then contact our local after-service office simultaneity.

 Make your head away from the burner when ignition. After operation, please turn off gas valve or knob avoiding from accident.


 The cabinet to install built-in gas hob should have installation size with good ventilation, and the square shouldn't be less than 100 , or it may cause explode because of leakage.


 Please don't use the hob to heat when the pot is not put on or there is on food in, it may cause the hood damage at the top of the gas hob because of it's too hot, even may light the rest oil in the hood and cause a fire accident.

 Don't allow to hide flame by baffle. Don't put flammable thing around gas hob. And gas hob can't be used to dry wipe or clothes, etc.






 Don't allow to touch pan standing, copper cover or cooktop during operation or flame out right now because of still high temperature.

Warning






 The gas hob can only be used for family kitchen

 Don't go out or sleep during using. closing switch knob and gas valve after using, check again before sleeping or going out.

 Warning

 Strictly Enforce	If combustion caused by the oil temperature is too high, please cover fire with large area metal cover immediately, such as in cast iron pans to isolate air and turn off gas total valve, please do not use water to put fire out, so as to avoid accidents.
 Forbid	Forbid children to use gas hob avoiding from accident. Forbid children without taking care to use, and put away from children, otherwise may cause burns, electric shock or other injury.
 Forbid	Don't Put down the gas tank to use.
 Forbid	Confirm whether the type of gas is the same as provided on the hob before installation, if not, please don't install and use
 No disassembly	Don't disassemble, maintain or repair the accessories by unprofessional person.

 Attention

 Strictly Enforce	The ignition time should be less than 20 seconds every time avoiding from explode; Please contact our local after-service office if failure ignition more than 5 times. then contact our local after-service office simultaneity.
 Strictly Enforce	During the operation, gas hob will become hot, please don't touch hot part. Don't put metal tools on the cook, such as knife, fork or cap, because they maybe become hot.
 Strictly Enforce	The gas hob should be installed under good ventilated place, but don't allow to ventilate by strong wind.
 Strictly Enforce	Don't beat cook strongly. Put on or put down gas hob lightly in order not to destroy cook during moving or installation.
 Strictly Enforce	The burner is on backfire when the gas hob whishes and its flame become weak, turbid or other issue when using or igniting. Turn off the gas hob immediately. Check if the burner cap, copper core are positioned correctly, cut down or turn off the damper, and then reignite the gas hob a half minute later.


Product Overview

Dear users:

Thank for your patronage in buying ROBAM gas hob. Please allow me to express my sincere gratitude on this occasion. You are kindly suggested to read this manual carefully before installation and operation of this product, and keep it properly for future reference.

Our company is the professional manufacture of range hood, gas hob and other home appliances. ROBAM gas hob adopts advanced mind, care holistic design and optimize structure. Our gas hob has high heat efficiency and safe usage and it's recognized as eligible product by different testing institutions in the industry.

Product Structure

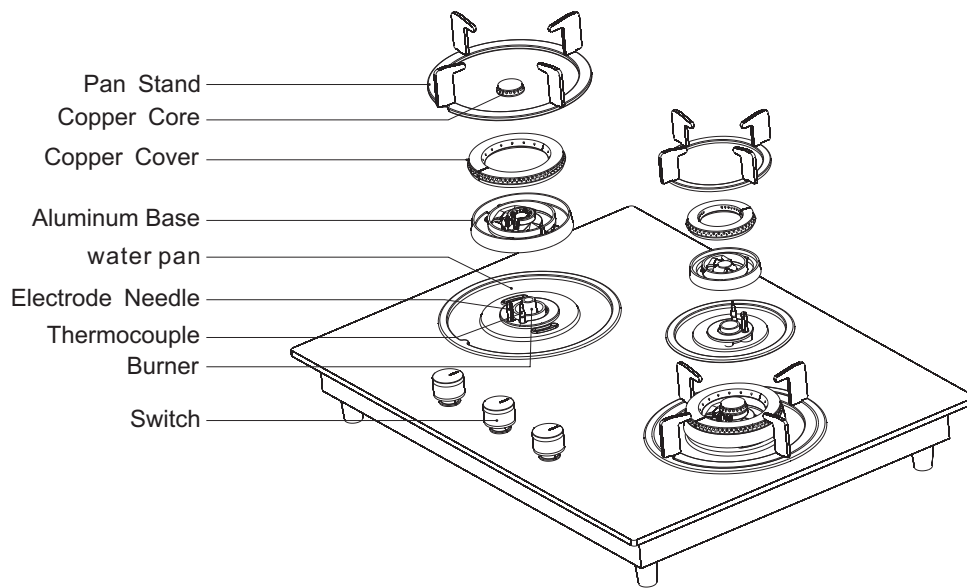

Product Features

1. Fashionable appearance: design clings to fashionable trend and comply with modern kitchen;
2. Top grade of parts and durable quality, more safe and effective;
3. Pluse ignition with flame failure safety device, easy to operate;
4. Full air in flow, supply air from cooktop, flexible air door and abundant burning;

Product Parameter

Item Name	Gas Hob
Item No.	JZ(Y/T/R)-B398
Gas Style	See the label
Rated Pressure	See the label
Heating Load(kW)	See the label
Gas Connector	φ 9.5mm special gas rubber gasket (G1/2 inch special metal gasket)
Product Size(mm)	700×525×150
Net Weight(kg)	16.8
Gas Burner	3
Air in flow	Full
Panel	Tempered Glass
Installation Size(mm)	653×478
Ignition Method	Pulse
Flame Failure Safety Device	Yes

Note:


- 1.Parameters indicate for reference only. The exact data should be confirmed on the label on the gas hob.
- 2.The installation size of built-in gas hob should be confirmed by the specification on the gas hob.
- 3.ROBAM keeps right to alter design or specification.

Installation Instruction

- 1.The minimum distance between the cooktop and surrounding objects is 15cm, and it needs at least 100cm net height on the top of cooktop. If installing range hood, please adjust space according to the installation instruction of range hood.
- 2.The cabinet to install built-in gas hob should have installation size with good ventilation, and the square shouldn't be less than 100M², or it may cause explode because of leakage.
- 3.If connected by special rubber tube, one side of rubber tube should connect gas valve, and another side should connect intake. (Notice: please take down the protective caps of the joint before connecting).The special rubber tube should cover the red mark in the joint and lock it with anchor ear. After testing leakage, the gas hob can be used.
- 4.Please install gas hob according to cut-out size, and put gas hob on the installation size properly.
- 5.Screw off φ9.5 soft pipe's connector firstly, if users want to use G1/2 inch connector, then put rubber gasket on connector place, screw nut, testing leakage. Don't use gas hob if there is any gas leakage.
6. The gas hob with LPG must use eligible reducing pressure valve.

Use Instruction


1. Check if the burner, copper cap, copper core or other parts are positioned correctly, and confirm the knob button (Picture 1) position, then turn on the gas valve.
2. Ignition: Press the control button then contrarotate 90 degree accordingly, it's big fire. (Picture 2), And the impulse sound will be heard, keep pressing down the button 2-3 seconds, then loosen it. If fail to ignition, try it again. Contrarotate more 90 degree, it's small fire. (Picture 3).

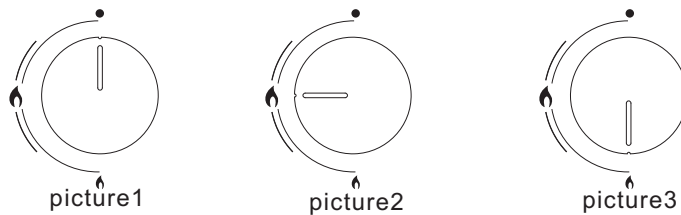

Note: If it's the first to use gas hob or gas hob is not used for long time, ignition maybe fail at the first time, please try it repeatedly because there is some air in the rubber tube.


3. Extinguish: the burner will be extinguished when the knob turn to the position. (Picture 1)
4. Adjust firepower: rotate knob according to accordant firepower instruction, then you can get corresponding firepower.
5. Adjust air: in order to burn sufficiently, users can adjust air by inlet. Adjust air door (at the bottom of gas hob) clockwise or counterclockwise until the flame is clear and blue. (like following picture). Please judge flame as following:

- Combustion well: the flame is cyanine without yellow flame or red fire, meanwhile, the interior and exterior flame is clear.
- Air deficiency: the flame is stretched , the interior and exterior flame is faintly, meanwhile, flame color is yellow or red.
- Air superabundance: the flame is left cap or shorter obviously, and the color is cyan.

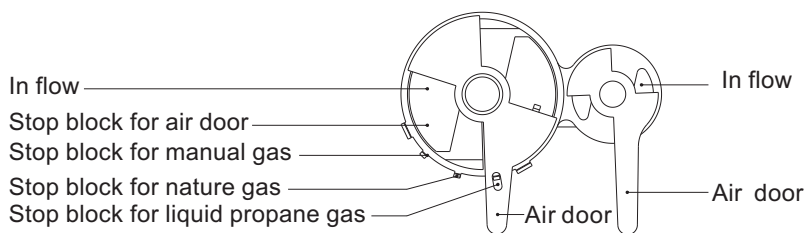

Clean and Maintenance

1. Maintain gas hob surface: Please clean it by wiper with neutral detergent, then clean it by wet wipe. Don't use steel brush or other rigidity objects to clean it.
2. Please clean and dredge the fire hole with brush or steel needle to keep normal usage and good combustion. Don't wash gas hob by water directly.
3. Please check copper core, copper cap or base regularly, if found their position improperly, please remove it to proper position, or it may cause danger.

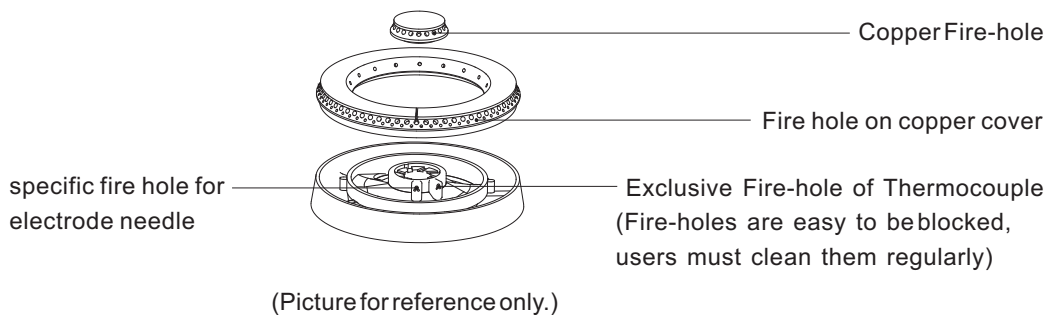

Statement

1. Please deal with battery properly if use up, avoiding from pollution.
2. This product use environmental-protection package and it's recyclable, please deal with package carefully to reduce waste.
3. If gas hob can't be used again, it may something useful materials, please assist to dispose or make up.

General Troubleshooting

Problem	Reason	Resolution Method
Ignition Failure	Gas valve is not open	Turn off the gas hob, then open the gas valve
	Air in gas hose	Exhaust the air by igniting repeatedly
	Hose is twisted or blocked	Straighten, clean or replace the hose
	Electrode needle is dirty or wet	clean
	Improper distance between ignitor malfunction or the electrode needle	Adjust the distance to 3.5-4mm between electrode needle and connecting side
	Without battery, improper polarity of battery or power insufficiency	Install battery properly or replace it
Ignition then extinguish if loosen hand	Improper position for copper core, cap or base	Put them to proper position
	Air door opens too big	Adjust air door properly
	Knob don't press properly	Press knob 3-5 seconds after ignition, then loosen hand
Leakage of gas hob (terrible smell)	Knob is still open	Turn off knob
	Hose is not connected well or crack	Connect well hose or replace it
Abnormal flame or noise	Air door isn't adjusted properly	Adjust air door
	Burner or flame is blocked	Clean blockage
	Gas source isn't accordant	Select right gas hob
	The pressure is not steady and water in hose	Clean the water in the hose

Attachment

- | | |
|------------------------|--------------------------------------------------------------------|
| 1.Operation manual | 3.One battery |
| 2.Installation templet | 4.2pcs of anchor ears
(except of products with metal soft pipe) |

┌

Edition: A/0
Publication Date: December, 30, 2016

└

ROBAM

└

└